 




ZOWEETEK

**Presenter ZWP02**  
2.4GHz Wireless Presenter  
User's Manual



www.zoweetek.com

**Overview**

Thanks for your purchase of this wireless air mouse presenter. It is a mini wireless remote with laser pointer and USB receiver.

In meeting, lecturing, training and speech, this remote can perfectly operate the computer screen, HTPC and projectors, at a distance of 30m; you can also use it to enjoy home, theatre, car entertainment system, tablet and internet surfing.

In most circumstances, the red laser pointer can be used for clearing presentation at a distance of 30m; you can walk freely to interact with the audience. Shortcuts like Page up and Page down allows you to browse data fast, the buttons are soft and easy to use.

The plug-and-play USB receiver requires no software installation, which can be place back to receiver chamber to avoid being lost.

**Operation system**

support Windows7, Windows8,8.1. Windows 10, Mac OS, Linux, Android 4.3 and above.


**Package contents**

- 1)Wireless presenter\*1
- 2)User Manual\*1
- 3)Charging Cable\*1

**Specifications**

Technology: Radio Frequency  
 Frequency: 2.4GHz  
 Control Distance: >30m  
 Laser level: Class II  
 Max Output: <1mW  
 Battery: 360mAh Polymer Lithium Battery  
 Working Voltage: 3.7V  
 Sleep Current: <10µA  
 Dimension 139\*18\*20mm  
 Weight: 30g

**Function Modification**

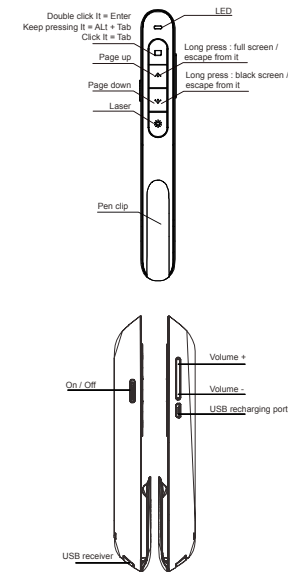


**Function Description**

- 1) Open PowerPoint files
- 2) Press "Page Up" button for 2 seconds to start the presentation, Press it again to Stop the presentation.
- 3) Simply press"Page Up" or "Page down" to go forward/backward the presentation
- 4) Press"Tab" button if there is a hyperlinks in the presentation and press"Enter" to open it.
- 5) Once the hyperlinks was open, long press the "Tab" button to switch the opened application window and release "Tab" button to choose the application window.
- 6) Default setting for " Page Up" and "Page Down" is arrow up/down function on computer, press "Page Up" and "Page Down" at the same time for the first time, it will change to arrow left/right function on computer. Press it at the same time for the second time, it will change to page up/down on computer and once press it at the same time for the third time, it will go back to default setting.
- 7) You may press "Volume Up" or "Volume Down" to adjust system volume.

**Charging the wireless presenter**

- 1) Once the battery is low, the red LED light will flash slowly to remind you of charging the device.
- 2) Connect the wireless presenter to USB port, the red LED will stoped flash and show steady red, it goes into charging status.
- 3) When the red light turns off, it means the battery is full.(Usually it will take about 2 hours to full charge the device)

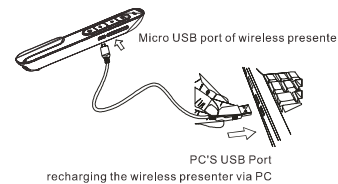

**Warning**

Never try to open or repair this product yourself. Keep this device away from fluids, such as water

**Maintenance**

- Do not attempt to disassemble the device.
- Doing so will avoid the warranty.
- The battery will discharge if it is stored for a long time without operation.
- Do not expose the device in extreme heat or cold environment, which will shorten the battery life.

**Disposal**

 Always dispose the used appliance at a recycling centre.Do not dispose the used appliance together with the household waste.

**Notice:**

Due to 2.4G wave technolog adoption, the connection can be subject to interference from obstacles, like walls, metals or other electronic devices. Please keep the space between the keyboard and USB receiver free of obstacle.

In line with the policy of continued development, the manufacture reserves the right to amend the specifications without prior notification. The illustrations in the user manual are for reference only. Please operate according to the real design.

