 
 


FM Function:


Switch on the speaker, short press "M" to choose the FM mode with the screen showing radio frequency; Long press "M" to enter into automatic channels searching, after searched successfully, the device will save the channel automatically. Please press "◀" or "▶" to choose the saved channels.

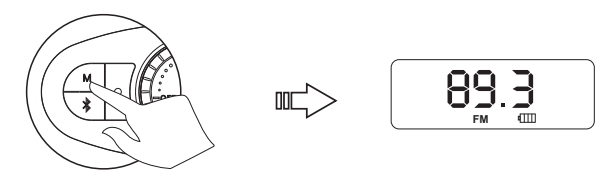

Function Illustration (Wireless MIC):

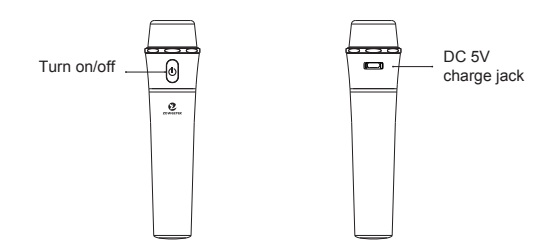

- 1. Turn on/off:**
A. Long press "⏻" to turn on, and the blue indicator light will on all the time;
B. In "power on" state, long press "⏻" to turn off, and the blue indicator light will go out.
- 2. Pair the UHF microphone manually:**
 This product automatically pairs when turned on, without the need for manual pairing.
 If the connection is disconnected, then quickly press "⏻" key twice on the mic, waiting for 5 seconds until the mic blue light stop flashing, which means pairing is successful.

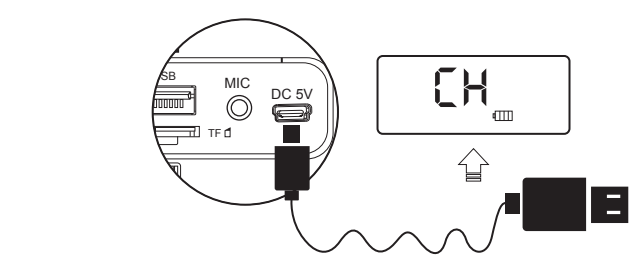

About Speaker Charging:

If the battery icon on the screen flash continuously, indicating that the battery is low, please charge it in time. When charging, the screen battery icon will flash continuously. When fully charged, the battery icon will stop flashing and remain in the long light state.

About Hand-held MIC Charging:

The Hand-held MIC is low battery with red indicator flashing, please charge it timely. The red light flashes during charging, but stops flashing and remains on when fully charged.

Attention:

- Please unplug the adapter timely after fully charged the charging time is normally 3-5 hours.
- Please use the charger included in the package to charge the product.
- In order to achieve the best effect when using the speaker for the first time, it is recommended to be fully charged before use.
- When charging, please turn off both the speaker and microphone, and do not use them during charging.

Caution And Trouble Shooting:

- The speaker and microphone are paired automatically when you turn them on, no need to pair them manually.
- If there is no sound after turning on the speaker and microphone, then quickly press "⏻" key twice on the mic, waiting for 5-15 seconds until the mic blue light stop flashing, which means pairing is successful.
- The volume control button for the microphone is on the back of the speaker.

Solve some normal problems by yourself:

Switch on the speaker but no sound	1. Main machine is running out of battery	Please recharge it to switch on.
	2.No audio input	Please use another better audio files.
	3.Haven't turned on the volume	Please adjust the volume properly.
With sound distortion	1.The volume is too high	Please turn down the volume.
	2.The speaker is broken	Please contact us for maintenance.
No sound with MIC	1.Haven't switched on the MIC	Please turn on the MIC properly.
	2.Haven't turned on the MIC volume	Please turn on the MIC volume.
	3.The UHF wireless is disconnected or wireless MIC is low battery	Please pair the UHF wireless microphone again. Please recharge wireless MIC.
No sound with MP3 playing	1.The audio's format in USB flash drive or TF card is wrong	Please turn the format to MP3.
	2.Chaotic procedure with wrong	Please restart the speaker.
	3.Haven't inserted the USB flash drive/TF card properly	Please insert the USB/TF card properly.
The music is staccato when playing	May exceed the distance range or too many obstacles	Please check whether the distance beyond the effective range of 33 ft. Clear any barriers between your device and speaker.

Zoweetek Guarantee:

100% Zoweetek Guaranteed Product Satisfaction.


We promise 1 year warranty.

If you have any questions, please feel free to contact us through Amazon or obtain assistance through technical support, we will try our best to provide you best service.

Technical support and troubleshooting

- ✉ support@zoweetek.cn
- 🌐 web:www.zoweetek.cn

ZOWEETEK Original Voice Amplifier

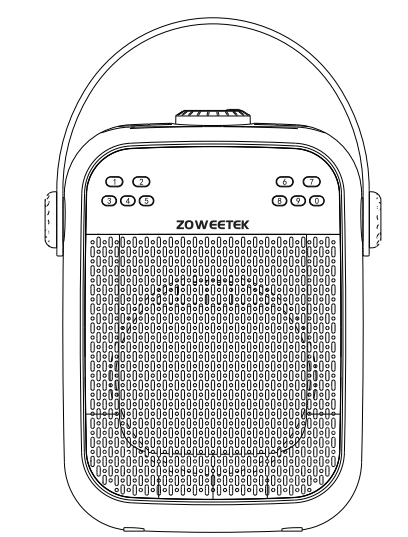

ZW-H6 USER MANUAL

ZOWEETEK H6 is a voice amplifier with wireless microphone that amplifies your voice without making it mechanized in sound quality. Enjoy the freedom of expressing yourself confidently, without the fear of your voice getting lost in the crowd. Support Bluetooth function. It's not just a voice amplifier, it's also a portable speaker.

Please read the following introduction carefully before using it.

Note: Before turn on the amplifier, ensure that the MIC don't point at the amplifier, this will eliminate any annoyance associated with howling.


Features:

- ZOWEETEK patented appearance;
- Bluetooth 5.0 which can support sync music play and wireless karaoke;
- Support TWS function, Bluetooth connection distance up to 33 ft;
- Supports FM and REC functions;
- Support TF card, USB flash disk and 3.5mm AUX audio input;
- Equipped with ZOWEETEK special acoustic wireless microphone.


Specifications:

Output Impedance:	4Ω	Frequency response:	80Hz-18KHz
Charging voltage:	DC 5V 2A	Work temperature:	-10°C - 45°C
S/N ratio:	≥70db	Amplify time:	8-10 hours
Sensitivity:	550 ± 30mV	Music-play time:	6-8 hours
Support TF card:	≤32G	Charging time:	3-5 hours

Function illustration:

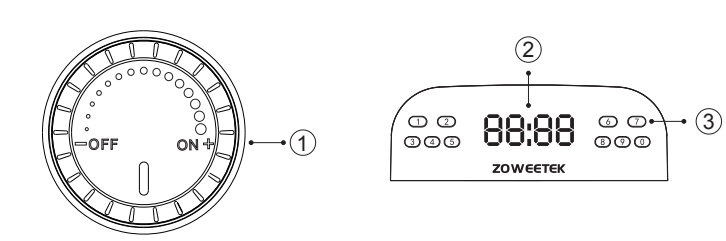

- Power/Volume:** Rotate the knob to "on" till the display light up to turn on the speaker. During start-up status, rotate the knob clockwise to "+" to continuously increase the volume; rotate the knob to "-" to decrease the volume. Rotate the knob to "off" to turn off the device.
- Digital display screen:** Support FM radio frequency display, music play time display.
- Number pad:** Use the number pad to select the playing track in the TF card or USB flash drive, or select the FM channel.

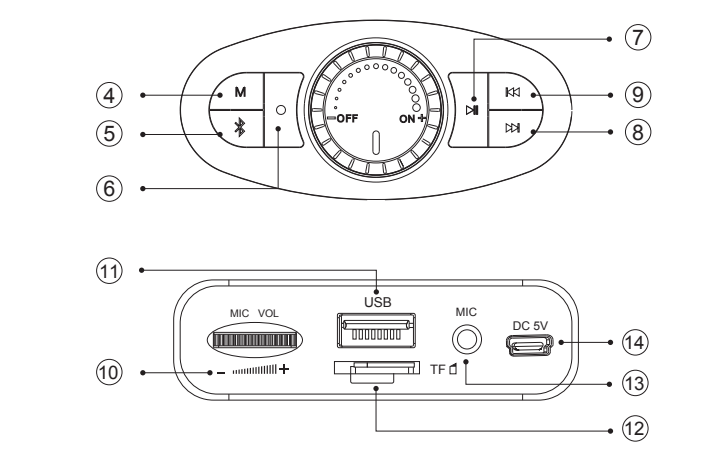


- Mode selection:** Short press "M" to select TF card mode/USB flash drive mode/Bluetooth mode/FM mode.
- One Key Bluetooth:** Short press this button in any mode to pair the Bluetooth, long press this button in mode to disconnect.
- REC Function:**
 - Connected with wireless or wired microphone, in any mode, long press "•" when the time on the screen began to beat to enter into REC mode to record with inserting storage USB flash drive or TF card (maximum 32GB). After recording, short press "•" again to stop recording and savethe audio files and start to play the recordings.
 - In music mode, short press "•" to enter into recordings play mode with inserting storage (which have recordings). It will play the last recording by default and please press "◀" or "▶" button to select the previous and next recordings.
- Play/Pause:**
 - In music play mode, short press it to pause; short press it again to play;
 - In any mode, double press the "M" button to close the voice prompt of the speaker, and double press the "M" button again to turn on the voice prompt of the speaker.
- Next:** Short press "▶" to select next audio file. Long press to fast forward.
- Previous:** Short press "◀" to select previous audio file. Long press to fast rewinding.
- MIC volume:** Rotate the knob clockwise to "+" to continuously increase the volume; rotate the knob to "-" to decrease the volume.

- USB port:** Support USB flash drive play with a voice prompt "USB flash driver playing". Maximum support 32GB USB flash drive with MP3/WAV/WMA format.
- TF card slot:** Support TF card play with a voice prompt "TF card playing". Maximum support 32GB TF card with MP3/WAV/WMA format.
- MIC jack:** Insert the wired microphone with Ø3.5mm plug. (the standard package don't include wired microphone).
- DC 5V:** Please use the DC 5V=2A power adapter to charge the speaker. (Charging cable and plug are included in the package).

TF card/USB flash drive function instruction:

After inserted the TF card/USB flash drive into the slot of TF card/USB flash drive according to the direction of the speaker identification, the speaker will automatically play the music file of TF card/USB flash drive, and the previous song and the next song can be selected by pressing the "◀" or "▶" button.

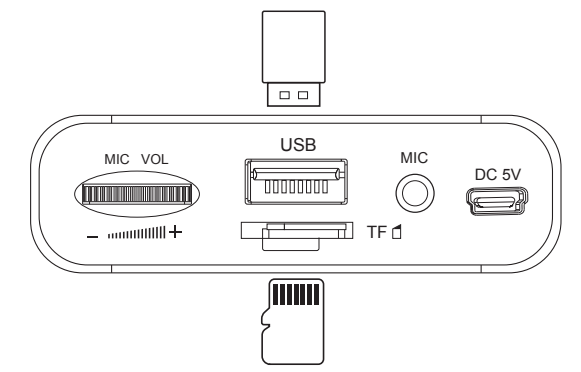

Bluetooth Function:

- Switch on the speaker and press "*" to enter into Bluetooth mode. (The Bluetooth mode is ready with voice prompt "Bluetooth is waiting for connection" and "*" on the screen keep flashing).
- Turn on the Bluetooth function of your mobile phone and search "ZW-H6". Click and it will be connected successfully with a voice prompt "Bluetooth is connected".
- After successful connection, it can play the audio files.



True Wireless Stereo Function:

- Switch on two speakers and both press "*" to enter into Bluetooth mode. Long press "M" of one speaker to enter into pairing status, when Bluetooth icon of another speaker stop flashing, which means this two speaker connected successfully.
- Turn on the Bluetooth function of your device and search "ZW-H6". Click and it will be pair successfully. Two devices will play simultaneously.
- Long press "M" of one speaker to exit this function.

