

Multi-function wireless microphone User Manual

To make any speaker as a wireless voice amplifier.



Caution:

- 1.Screaming. Keep the speaker far away from the microphone; keep the distance between audio device and MIC longer than 60cm.
- 2.In a small room, please turn down the volume to avoid screaming.
- 3.Please recharge the devices timely if low battery. The device must be fully recharged every 2 months when they aren't used.
- 4.Original accessories are suggested if they need to be replaced.
- 5.Non-professional technician is not allowed to dismantle or repair the product;please contact a local agent if there is any question or service requirement.
- 6.The receiver & wireless MIC should be kept in normal temperature, fire and other hot environment should be avoided.
- 7.The receiver & wireless MIC should be kept in dry and ventilated environments. Rain andwatershould be avoided.
- 8.Please put the product and accessories far away from children

Trouble shooting:

1. No sound:

- A.Please confirm the receiver has been inserted into AUX slot of the speaker. (NOT MIC slot.)
- B.The connection between Mic and speaker may be lost. If you press and hold on volume button "+", the connection may be broken and please re-pair it as mentioned in the previous paragraph.

2. With weird sound:

Please confirm the receiver has been inserted into AUX slot of the speaker. (NOT MIC slot.)

3. Sound is very weak:

Please short press "+" once by once(Do not hold on)to increase the colume of microphone; and increase volume on your speaker.
Notes:If it is still no sound, the wireless microphone may be disconnected. Please re-pair it follow the pair operation steps.

4. The working time is too short after fully charged:

Please confirm that the MIC & receiver have been switched off after fully charged.

5. Receiver doesn't work/ no sign on indicator of receiver.

- A.Turn on the wireless microphone
- B.Press the pairing button of receiver to wake up the blue indicator light, and repair it.
- C.If after A and B step, still no sign on indicator of receiver, Please turn it off and charge it.

SHIDU Guarantee:

100% SHIDU Guaranteed Product Satisfaction.

We promise 1 year warranty.

If you have any questions, please feel free to contact us, we will try our best to provide you the best service.


www.10shidu.com Email:info@10shidu.com

SHIDUSD-U8 UHF Multifunctional Wireless MIC is a highly integrated system with many features. It can be used with any audio device with AUX in function to realize wireless amplification.

Features:

1. Stylish, ergonomic and comfortable design;
2. UHF high frequency wireless technology with long transmission distance;
3. SHIDU special Hi Fi amplification electro-acoustic system;
4. Detachable head-mounted rack, support headset & hand-held usage;
5. Built-in polymer battery with high capacity;
6. Suits for any audio device with AUX in function to realize wireless amplification.

Function Illustration (Receiver):

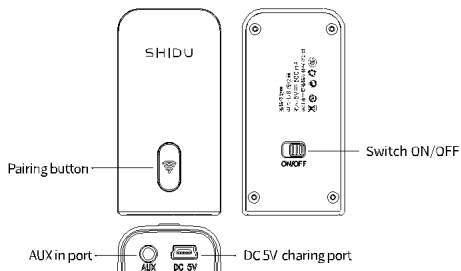

Receiver:

1. Switch on

Put the power button to "ON" side to turn on the device, and to "OFF" side to turn off it.

2. UHF frequency point pairing

Short press "📶", blue Indicator light blinks, then turn on the wireless microphone and long press "volume +" key for about 3s. The blue Indicator light stop blinking and will on all the time after paired successfully, then wireless MIC works.

3. AUX port (Audio out)

Connect the receiver and your audio device with $\varnothing 3.5$ - $\varnothing 3.5$ mm or $\varnothing 6.5$ - $\varnothing 3.5$ mm connector (your audio device should have AUX in jack), switch the device to AUX in mode, and switch on the receiver & wireless microphone, then wireless MIC works.


4. Mini-USB Port (DC 5V)

Please turn it off and charge it with mini-USB cable and connect to DC 5V charger. When charging, the red light will on all the time; it will go out when the battery is fully charged.

Notes:

- a. Charging time: 3-4 hours;
- b. We suggest that you fully charge before using it the first time;
- c. Unplug the charger as soon as it is full charged.

Function Illustration (Wireless MIC):

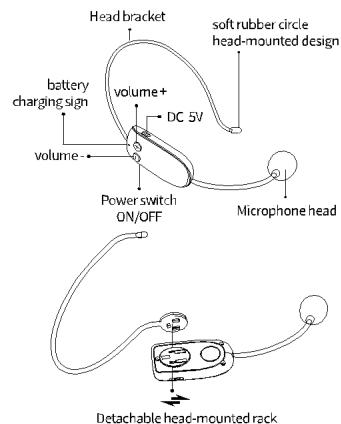

Specifications:

Microphone: Unidirectional condenser microphone
Frequency response: 30Hz-23000Hz
Output Impedance: $\leq 2.2K\Omega$
Sensitivity: $-41dB \pm 1dB$ (0dB=1V/Pa)
Charging voltage: DC 5V 500mA+
Working time: 3-5 hours
Charging time: 2-3 hours

Pair the UHF Frequency Manually:

First, turn on the receiver. Short press "📶" key, then turn on the wireless microphone and long press "volume +" key, and wireless MIC works.

Notes:

When in using, long press "+" to disconnect UHF with the speaker; to reconnect it, you need to manually pair as stated in the 'Pair the UHF Frequency Manually' section.
In UHF amplification mode, short press "+/-" is volume up / down.

Charge the Wireless MIC:

The battery in the headset is low when the blue light blinks. Please turn it off and charge it with mini-USB cable and connect to DC 5V charger. When charging, the red light will on all the time; it will go out when the battery is fully charged.

Please make sure the MIC and receiver is turned off after fully charged.

Notes:

- a. Unplug the charger as soon as it is charged;
- b. The headset will enter sleep mode if not used for 20 minutes.
Short press "+" or "-" to wake it up.